



# Buzzer alarm

“The door is open” Chinese and English can be switched by dial switch  
The left side is in English mode, right side is in Chinese mode.




## Time Delay


Adjust the delay time for locking automatically  
0/3/6/9 secs.




## Wiring Diagram

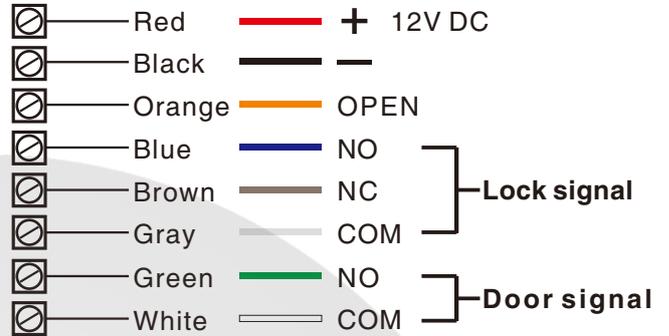


## Installation Steps

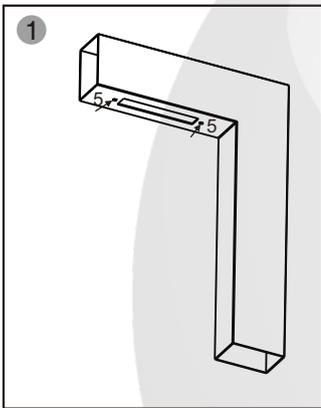


1. Incise the location of face plate and magnetic plate in the door leaf and door frame according to the mark of lore size

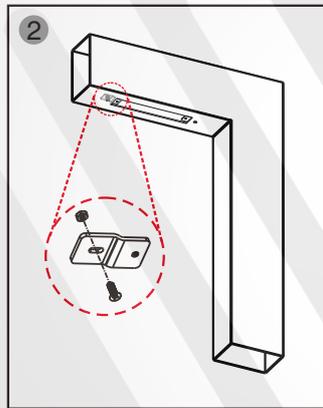

2. Mount extended slice

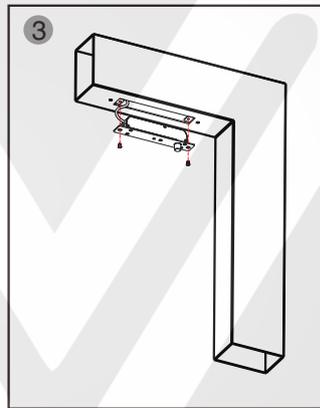

3. Connect power supply line and test

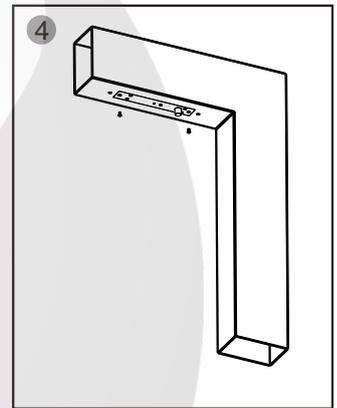

4. Tighten the screws

## Installation Schematic

